

**Arete Technologies SIA**

VAT Nr.: LV40003382374

AS SEB Banka

URN:40003382374

IBAN: LV46UNLA0034104643100



## **Operation manual ARETE SST type tanks. V.4/SST**

Arete SST type tanks are self-supporting portable tank suitable for temporary storage of oil and wastewater. Equally they can be used for temporary storage of oiled materials such as clothing or sorbent prior to disposal.

ARETE SST tanks can also be used for the decontamination of personnel and small equipment.

The instructions describe a typical process of installing and installing a self-supporting tank. When installing this tank, please make sure that the area of placement is flat and there are no stones, roots, or other sharp objects on the surface

**Step 1:** Prepare the ground to place the tank by leveling. Tank must be placed on a smooth and level surface.

**Step 2:** (optional): Spread the putty coating or ground

**Step 3:** Open the tank. Make sure that the tank is evenly open and there are no obstacles to mounting.

**Step 4:** Prepare your tank for filling by checking that the valves, gutters and other accessories are closed. Check for products or equipment that may end up in the hold at the time of filling. The filling hose can be carefully circled from above.

Ensure that all tank filling/emptying mounting connections connect a suitable flexible reinforced hose

**Step 5:** Do not overflow the tank - follow the manufacturer's instructions for capacity. The tank must be rigid and fixed to it, at the time of filling.

Emptying the tank: To empty the Arete SST tank, connect the exhaust hoses to the outlet. Open the valve when connecting. The pump can speed up emptying if necessary.